

QUICK REFERENCE GUIDE

1. Login and Logout

! CAUTION

We recommend to use **Internet Explorer 7** or latest version to access the ViewZ web management system. **Firefox** will work with ViewZ web management system, but some function and layout might not work perfectly.

Windows Edge and **Chrome** are currently not supported by ViewZ web management system.

Login



Step 1 Open Internet Explorer. Enter the IP address of the PVM IP camera (default value: 192.168.0.120) in the address box and then press Enter. The login page is displayed, as shown in Figure 1-1.

Figure 1-1 Login Page

Factory Default IP address : 192.168.0.120
Factory Default Subnet Mask : 255.255.255.0
Factory Default Gateway : 192.168.0.1
Factory Default DNS 1 : 192.168.0.1
Factory Default DNS 2 : 192.168.0.2

Caution: IP address and gateway address should be set with the same IP parameters. For example, if IP address is "A.B.C.0 ~ 255", then gateway address should be set as "A.B.C.0~255" (however, IP and gateway address cannot be the same.)



Step 2 Enter the user name, and password



Note

- The default user name is **admin** and the default password is **admin**. Change the password when you log in to the system for the first time to ensure system security.
- You can change the system display language on the login page.



Step 3 Click Login. The main page will be displayed.

Logout



To log out of the system, click the icon in the upper right corner of the main page. The login page is displayed after you log out of the system.

QUICK REFERENCE GUIDE

2. Main Page Layout

On the main page, you can see real-time video, receive alarm and fault notifications, set parameters, change the password, and log out of the system. Figure 1-2 shows the main page layout. Table 1-1 describes the features on the main page.

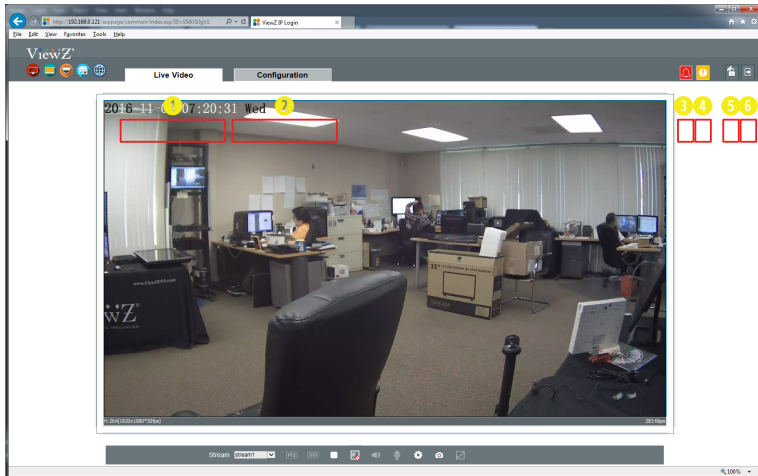








Figure 1-2 Main Page Layout

No.	ELEMENT	DESCRIPTION
1	LIVE VIDEO	Real-time video stream is displayed in this area. You can also set sensor parameters.
2	CONFIGURATION	You can select options to set device configuration, including the device information, audio and video streams, alarm setting, and privacy mask function.
3	ALARM	When the device generates an alarm, the alarm icon  is displayed. You can click  to view the alarm information. NOTE : When the device accepts an alarm signal, the alarm icon will display within 10s in the web management system.
4	FAULT	When the device encounters an exception, the fault icon  is displayed. You can click  to view the fault information.
5	CHANGE PASSWORD	You can click  to change the password.
6	LOG OUT	You can click  to return to the login page.